Adapter Plate for RCS Clamping Element

Because of the height difference of different rail guide blocks and to ensure the proper function of the RCS Clamping Elements, the use of adapter plates is sometimes needed. See "Clamping Elements and Accessories" for individual block types and whether an adapter plate is needed.


Dimensions in mm.



General Data

| Designation | Compatible with | Remark | | |
|-------------|-----------------|---|--|--|
| RCP15-4 | RCS15 | Use Distance Plate RCP15-4 for SBI15SL | | |
| RCP20-2 | RCS20 | Use Distance Plate RCP20-2 for SBI20FL, SBI20SL, SBI20FLL, SBI20SLL | | |
| RCP25-4 | RCS25 | Use Distance Plate RCP25-4 for SBI25SL, SBI25SLL | | |
| RCP30-3 | RCS30 | Use Distance Plate RCP30-3 for SBI30SL, SBI30SLL | | |
| RCP35-7 | RCS35 | Use Distance Plate RCP35-7 for SBI35SL, SBI35SLL | | |

Dimensions

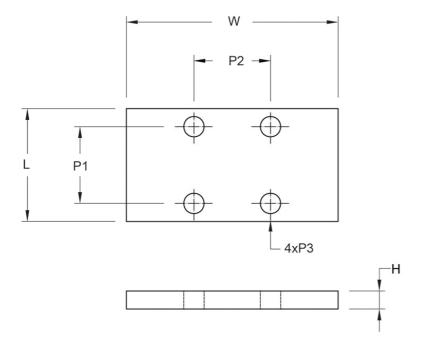

| Designation | Н | L | P1 | P2 | P3 | W |
|-------------|---|----|----|----|-----|-----|
| RCP15-4 | 4 | 25 | 17 | 17 | 4.5 | 47 |
| RCP20-2 | 2 | 24 | 15 | 15 | 5.5 | 60 |
| RCP25-4 | 4 | 30 | 20 | 20 | 6.5 | 70 |
| RCP30-3 | 3 | 39 | 22 | 22 | 6.5 | 90 |
| RCP35-7 | 7 | 39 | 24 | 24 | 8.5 | 100 |