

Plastic Hole Cap

Contaminants invade into the bolt holes of the rail and pollute the inside of the bearing. You can use hole caps to fill the holes. Hole caps are provided with the rails.

Dimensions in mm.

Note! Only for HRC rails.



General Data

Designation	Compatible with	Screw Type
HRC15 Hole cap	HRC15	M4
HRC20 Hole cap	HRC20	M5
HRC25 Hole cap	HRC25	M6
HRC30/35 Hole cap	HRC30/35	M8
HRC45 Hole cap	HRC45	M12
HRC55 Hole cap	HRC55	M14

Dimensions



Designation	H	D
HRC15 Hole cap	1,8	7,7
HRC20 Hole cap	3,4	9,7
HRC25 Hole cap	3,3	11,2
HRC30/35 Hole cap	4,4	14,1
HRC45 Hole cap	5	20,1
HRC55 Hole cap	6,3	24,2